

Brooksville Pulling Association

Farm Stock Rules

1959 and Newer

1. Safety rules apply to all tractors, classes, and persons.
2. Definition of a Farm Stock tractor: A stock unaltered Farm Stock tractor pulling from a factory draw bar in low gear only. Farm type tires and wheels to the manufactures specifications.
3. Tractors must have stock wheels.
4. Tractors must maintain stock appearance.
5. Tractors must maintain stock ignition system. (Straight exhaust acceptable.)
6. Tractors may use factory bolt-on wheel weights for make and model or may use water in tires.
7. Hang on weights within the wheelbase of tractor.
8. No custom brackets in wheels.
9. All Farm Stock must use clevis or flat plate mounted firmly to the drawbar not to exceed 20 inches high with 3 inch diameter hook hole.
10. Low gear pulling only.
11. No removal of parts on the Farm Stock tractors will be allowed. Examples include: Battery, starter, and/or air cleaners, etc. If the power take-off or hydraulic system pulleys are removed they must have a steel cover in place; provided a cover was offered by the factory. The only exception to this will be factory wheel weights.
12. Rear tires are limited to Farm Tractor type. No radial or cut tires.
13. If a part falls off while hooked to the sled, the puller will be disqualified.
14. Engine high idle RPM (No load) within 10% factory specs. Must have working governor, no direct throttles will be allowed.